FLO Ultra™







Flexible parking configuration options

The pull in parking configuration is ideal for drivers to pull in or back in. The station will have the user interfaces and connectors on the same side.



The pull through parking configuration is ideal for drivers to pull alongside the station. In this configuration, there is one interface and connector on the front and one on the back.



flo.com 1-855-543-8356 info@flo.com









